


LEAK RESISTANT CARRIERS FOR HOSPITALS

- ▶ Safe for operating personnel
- ▶ Helps to prevent contamination of the tube system
- ▶ Helps to minimize down times or added costs when cleaning the system
- ▶ Easily exchangeable colored coding rings
- ▶ Infusion bottles can be transported in systems with a tube diameter of 110 mm or greater

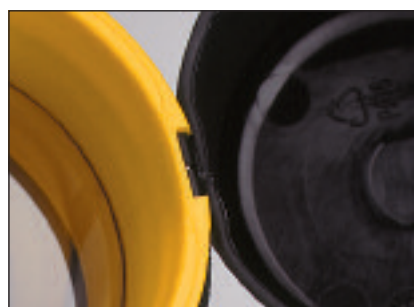

Liquids can spill from carriers with leaks from tubes or containers and contaminate pneumatic tube systems, and subsequent carriers can then transport such contaminants throughout the system. As a result, time consuming and costly system cleaning is necessary, and in extreme cases, tube sections must be disassembled, thereby putting it out of commission for extended periods.

Our new carriers are equipped with seals which prevent liquids from escaping. This ensures trouble-free operation of the system and reduces the risk of infection.



Carrier with test-tube insert

Carrier with colored coding rings



Carrier with infusion bottle

WIDE RANGE OF ACCESSORIES

- ▶ Insert for test tubes
- ▶ Pocket insert
- ▶ Locking clip
- ▶ Colored coding rings

FEATURES

- ▶ Caps with seals on both carrier ends
- ▶ Wide carrier rings which ensure smooth transport and gentle softlanding and permit a higher transport weight
- ▶ Colored coding rings, easy to change and re-use

Ordering no.	Model	Dimensions (mm, length x diameter)	Tube diameter (mm)	Bend radius (mm)	Colored coding rings	Infusions bottle
RP45739F	110K	230 x 76	110 x 2.3	650		
RP45738F	110K	230 x 80	110 x 2.3	550		x
RP45742F	110K	270 x 80	110 x 2.3	650		x
RP45741F	110L	330 x 76	110 x 2.3	650		
RP45743F	110R	370 x 76	110 x 2.3	800		
RP45755	160K	330 x 115	160 x 3.2	800	x	x
RP45751	160L	400 x 115	160 x 3.2	800	x	x
RP45754B	6"	14" x 4.5"	6"	36"	x	x

Ing. Sumetzberger GMBH

A-1110 Vienna, Leberstr. 108, Tel. ++43/1/740 35 0, Fax ++43/1/740 35-300
 e-mail: pt.sales@sumetzberger.at, Internet: <http://www.sumetzberger.com>

... plus more than 35 dealerships worldwide.

